




Copyright © this drawing is vested in the Architect and it must not be copied, reproduced without consent. Figured dimensions only are to be taken from the drawing. All contractors must with the site and be responsible for taking and checking all dimensions relative to their work. HewittCor Architects Ltd are to be advised of any variation between drawings and site conditions. CLIENTS ARE ADVISED TO CLARIFY DIMENSIONS WITH THE ARCHITECT PRIOR TO SETTING OUT AND NOT TO SCALE FROM THE DRAWING

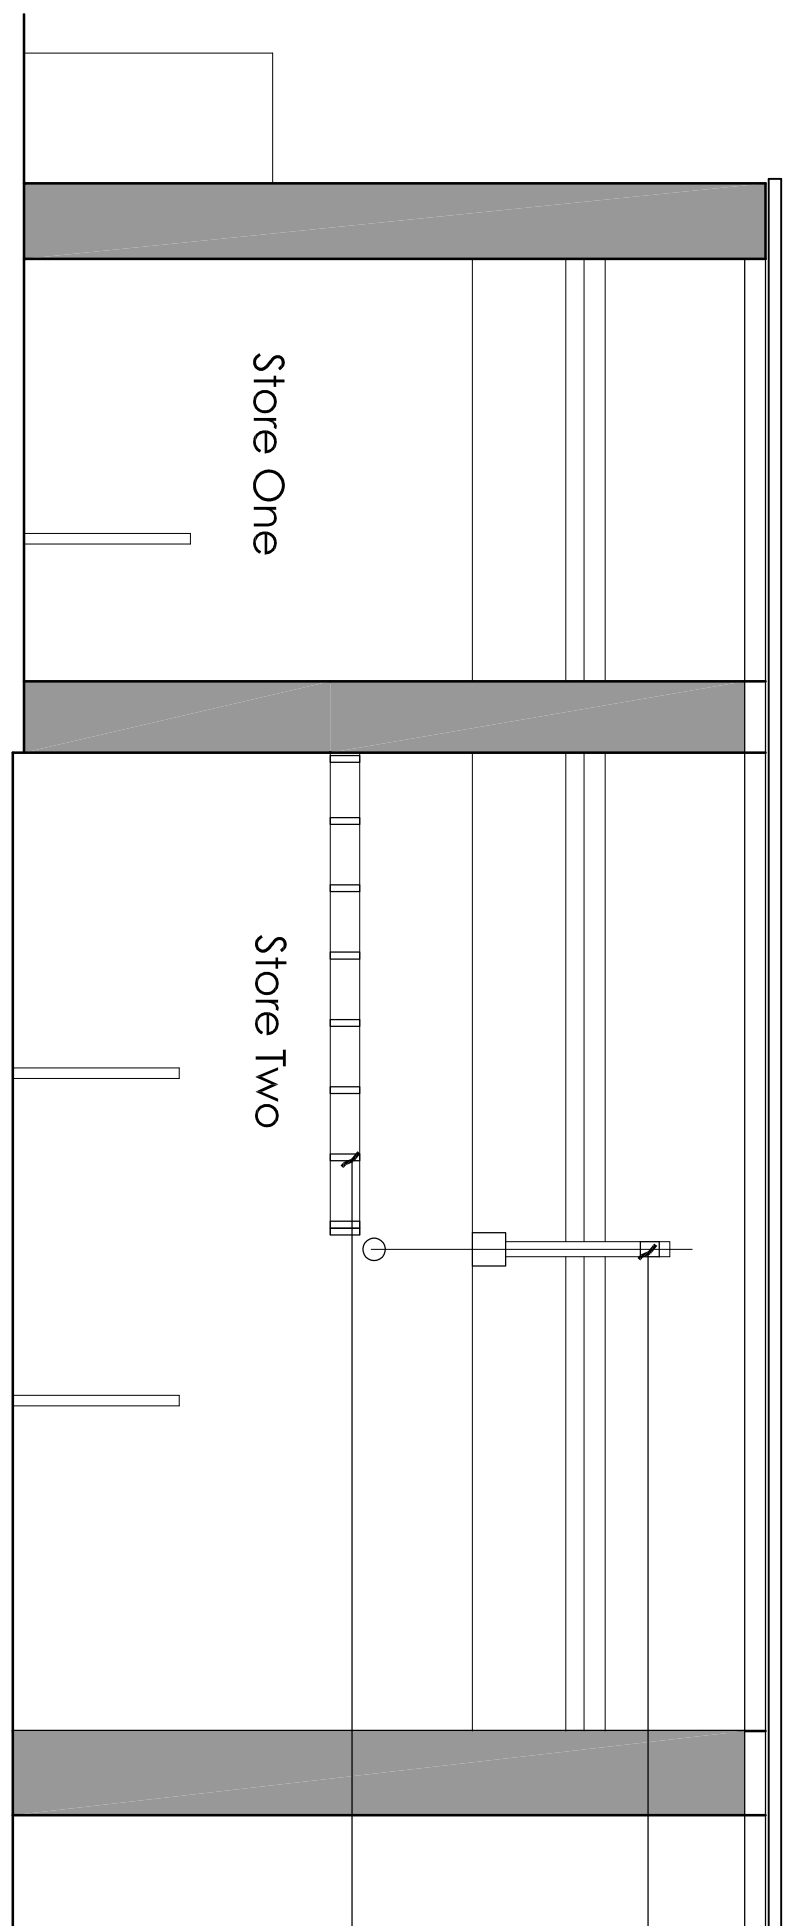


Section A - A scale: 1:50 at A1

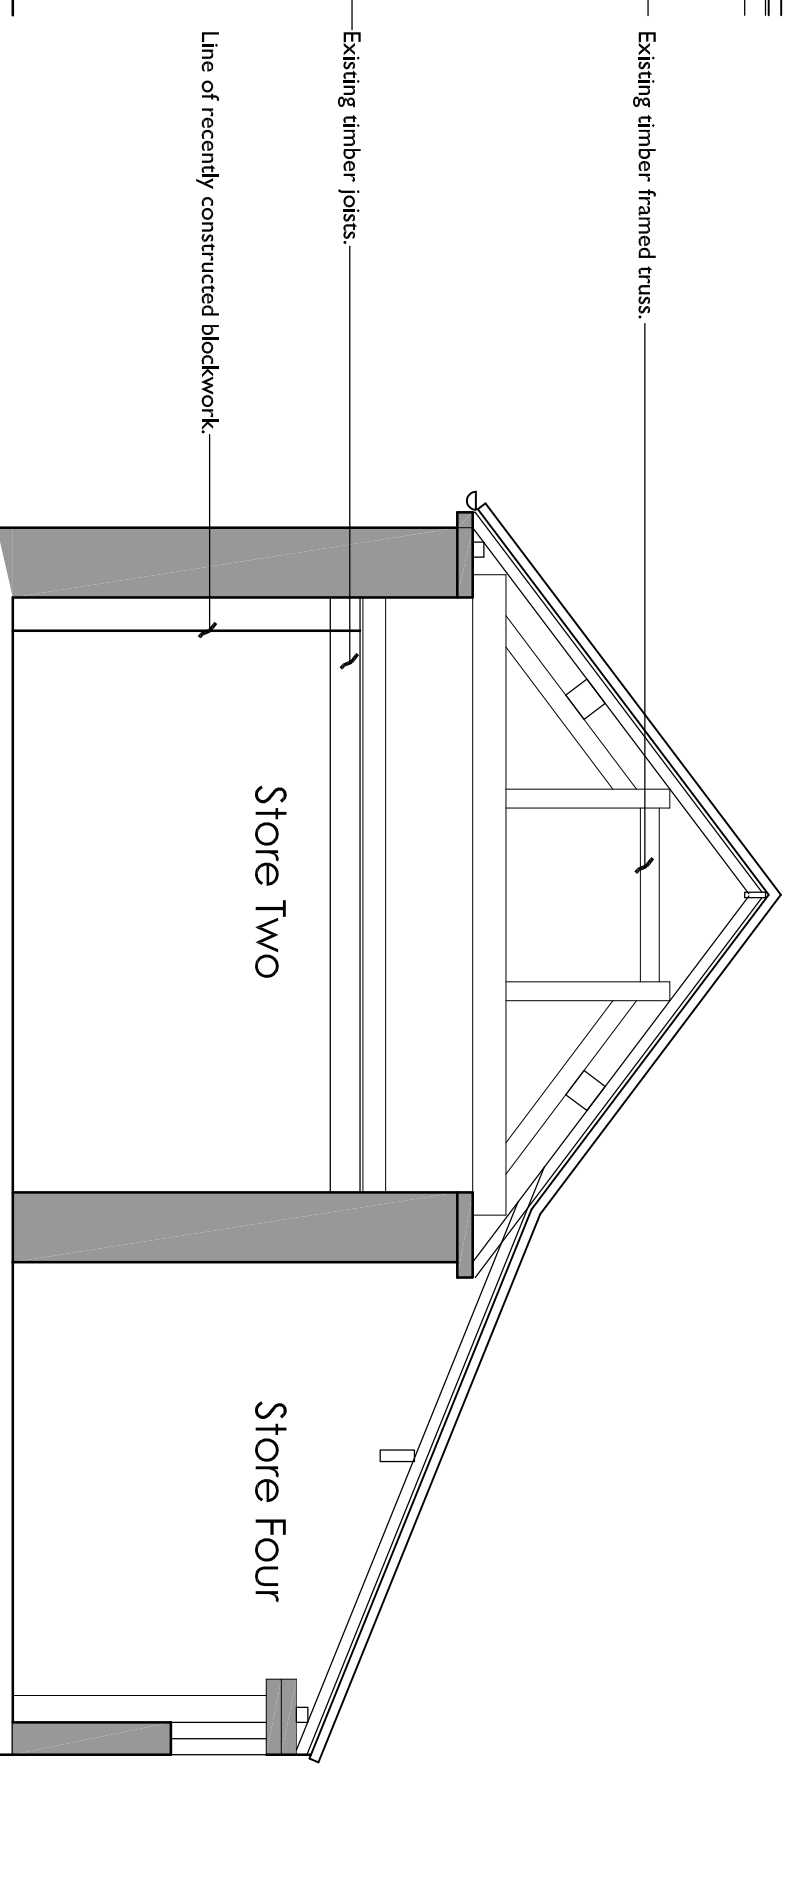


Section B - B scale: 1:50 at A1

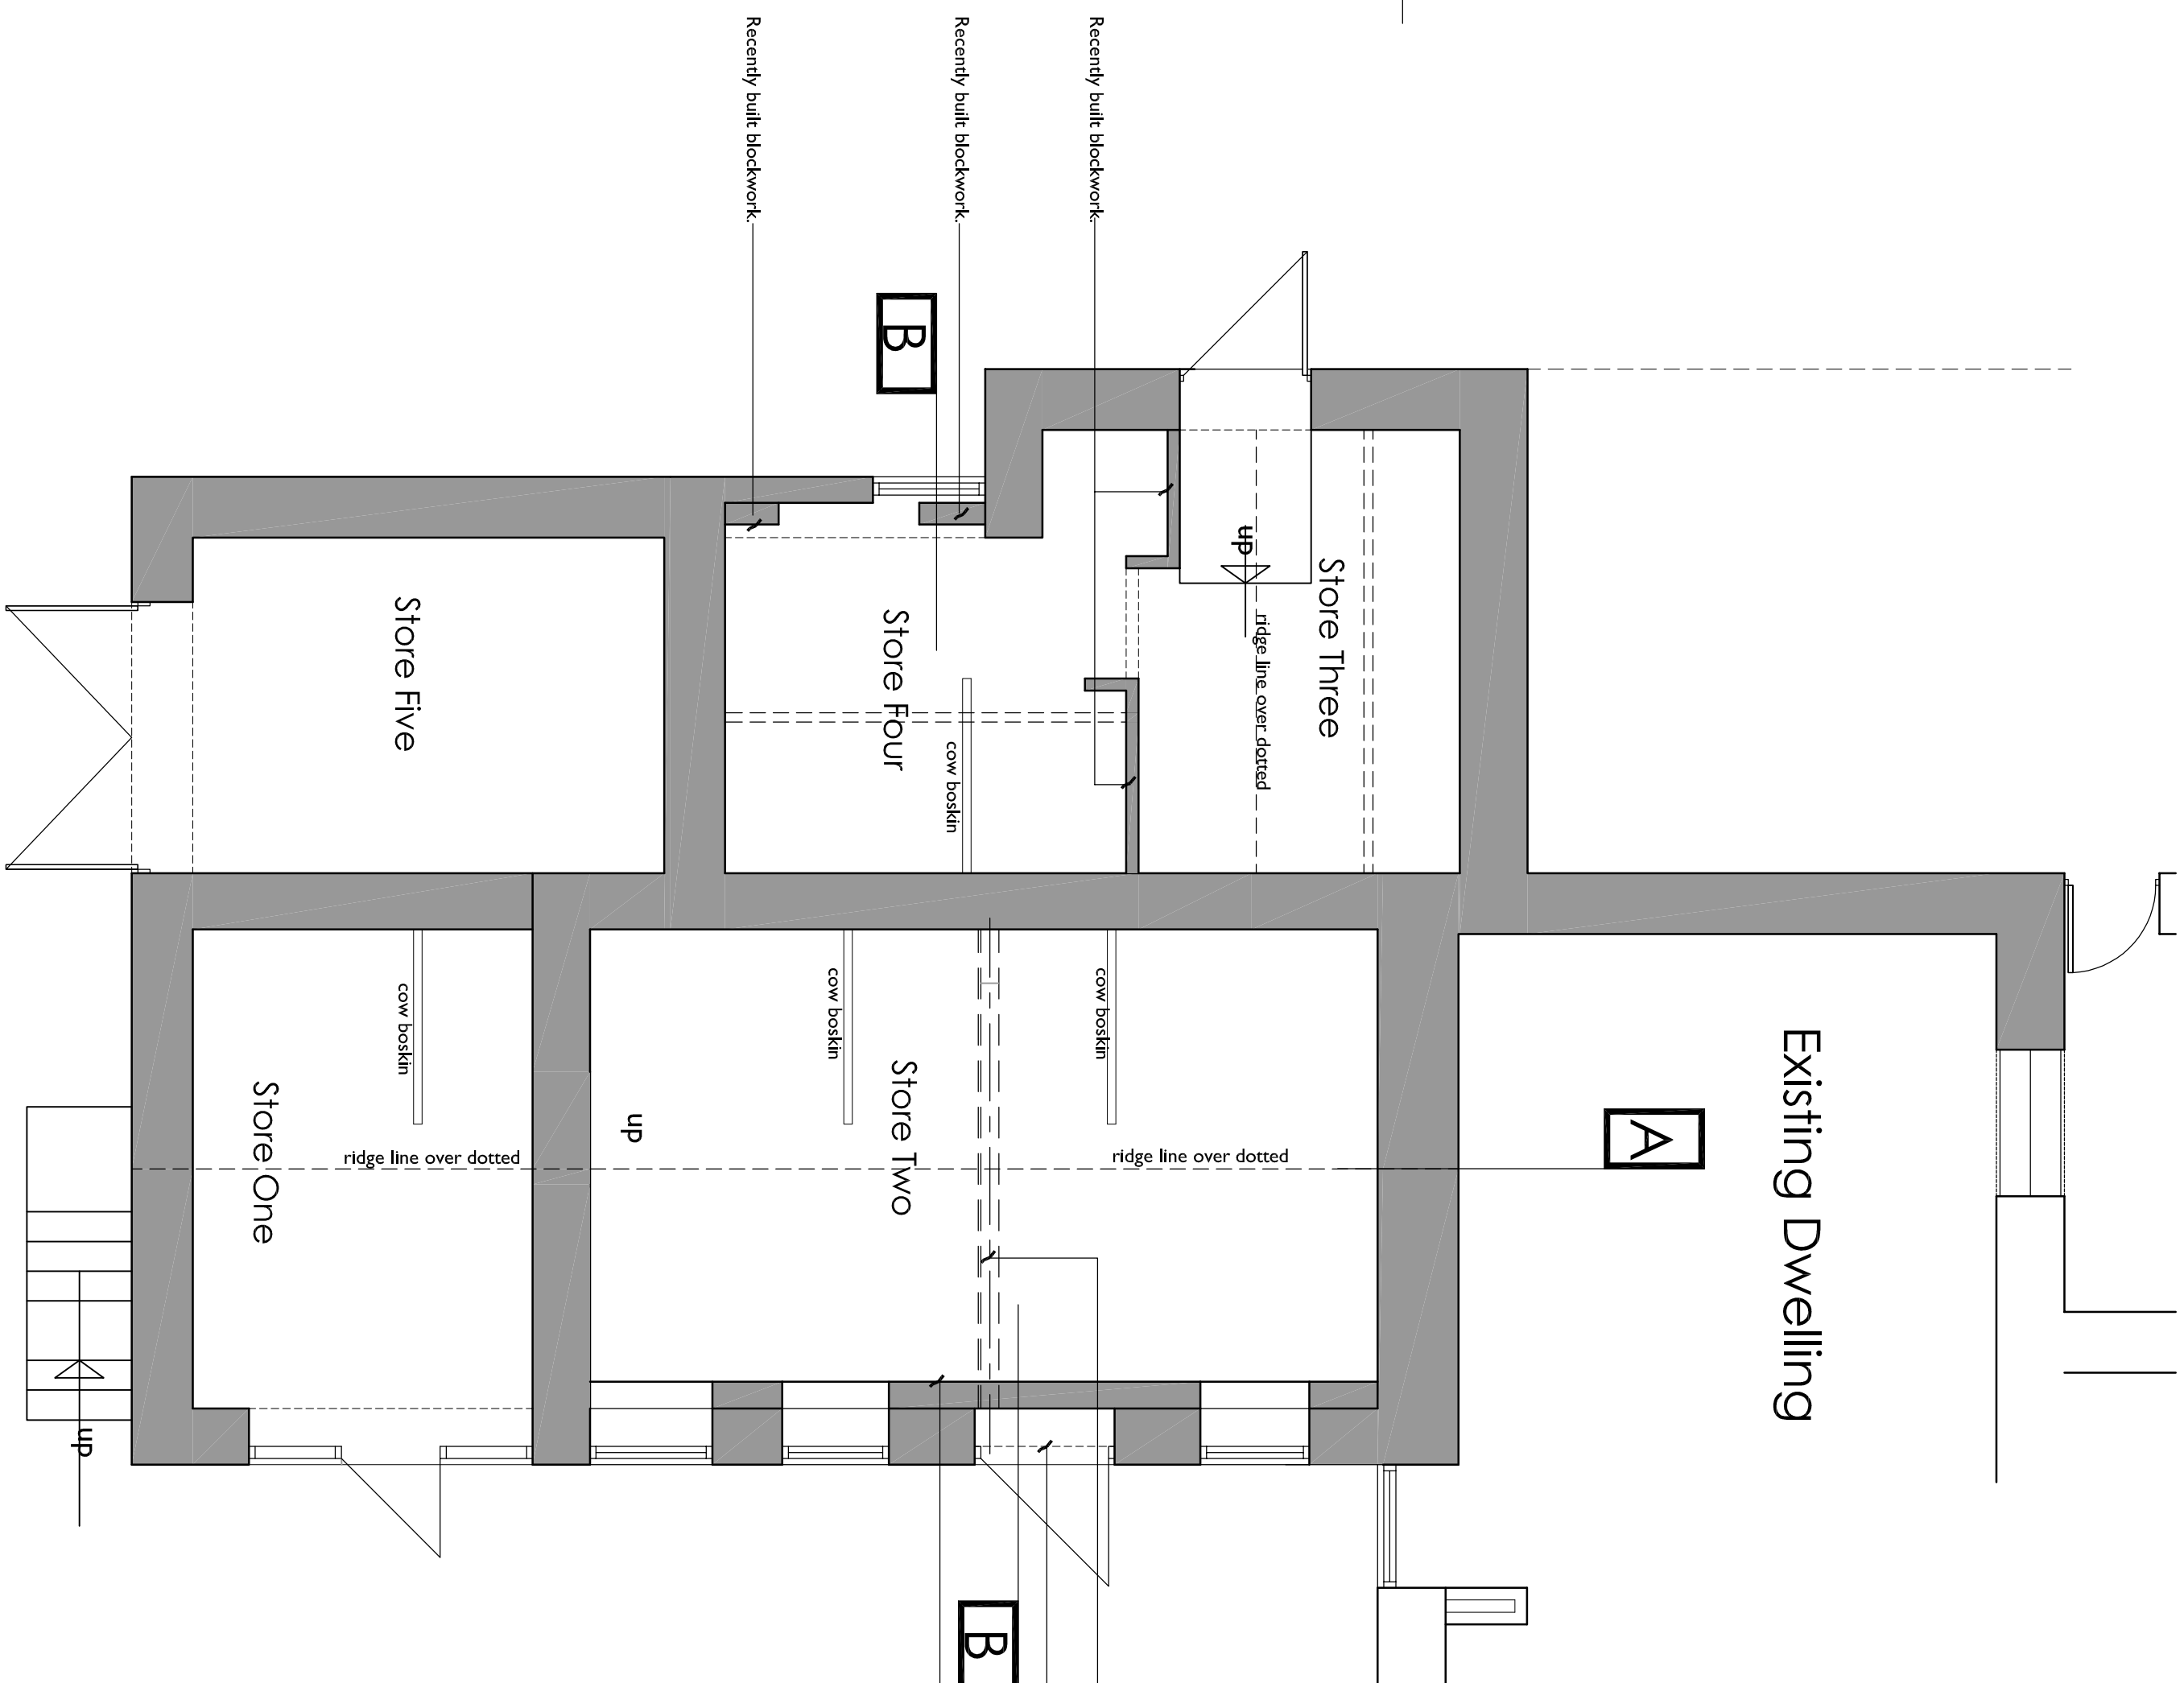


Ground floor plan scale: 1:50 at A1

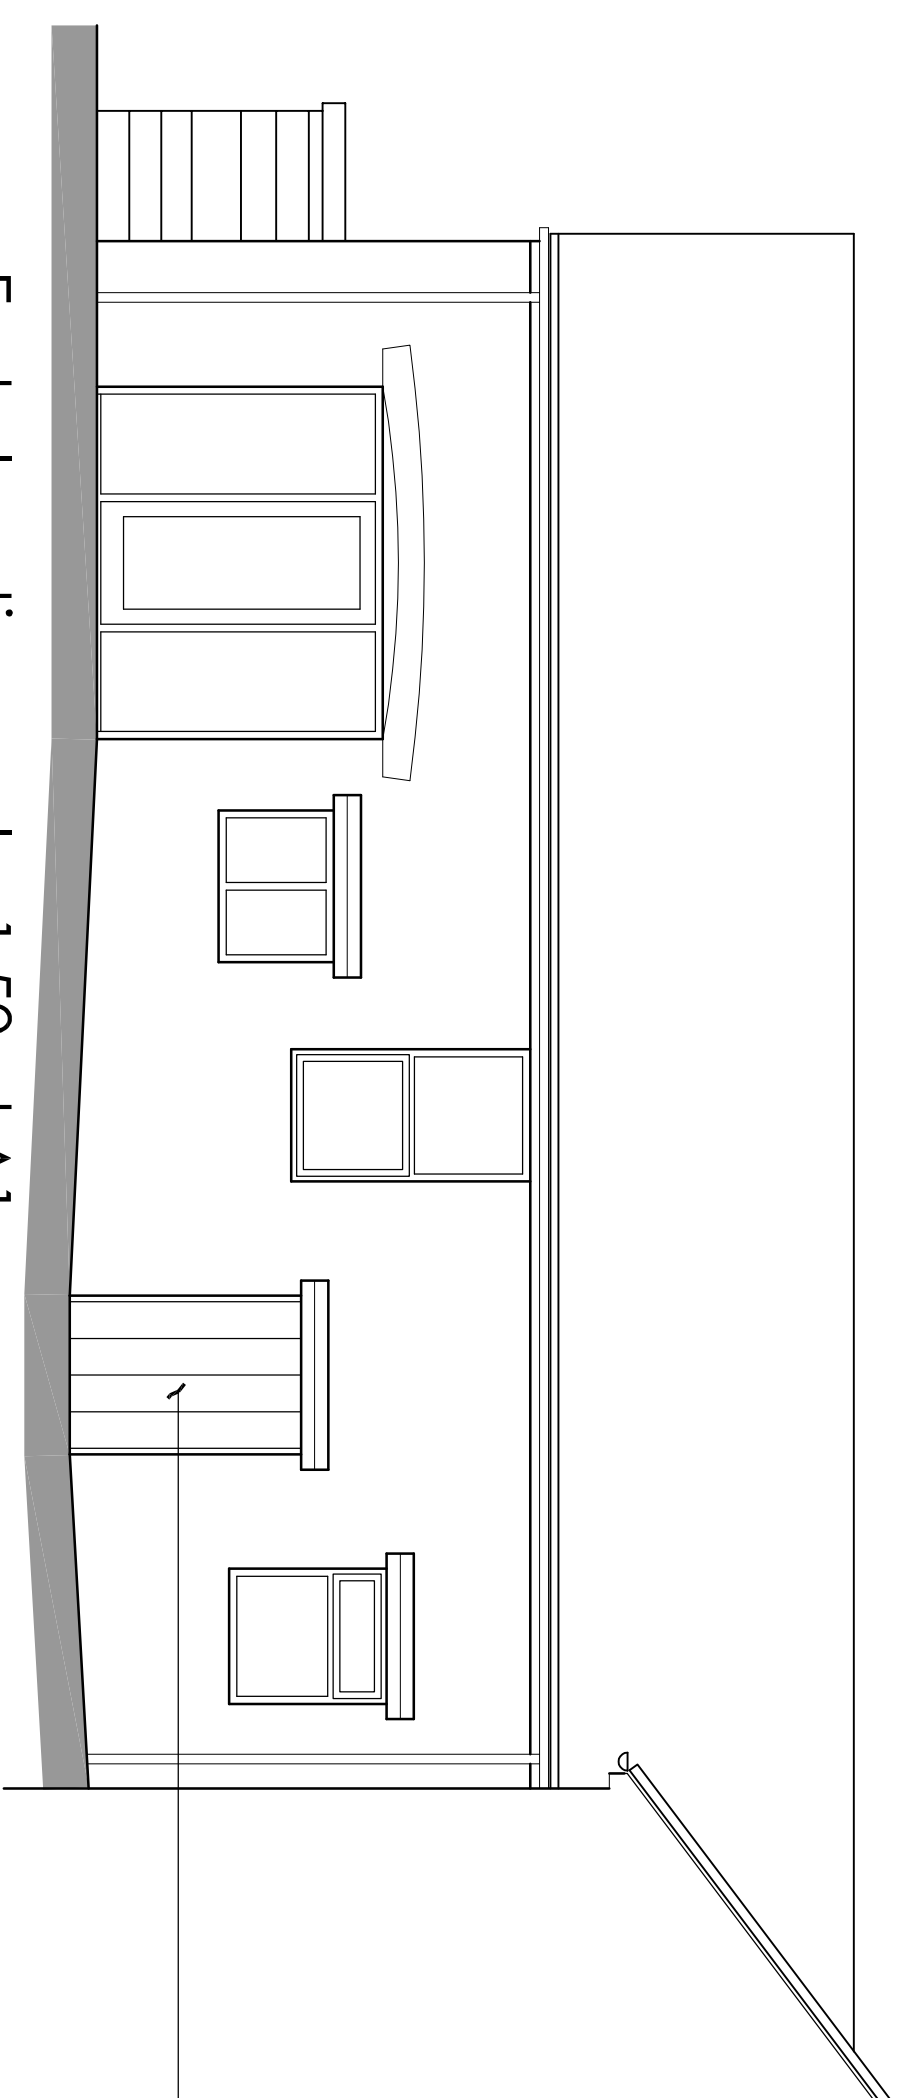


East elevation scale: 1:50 at A1

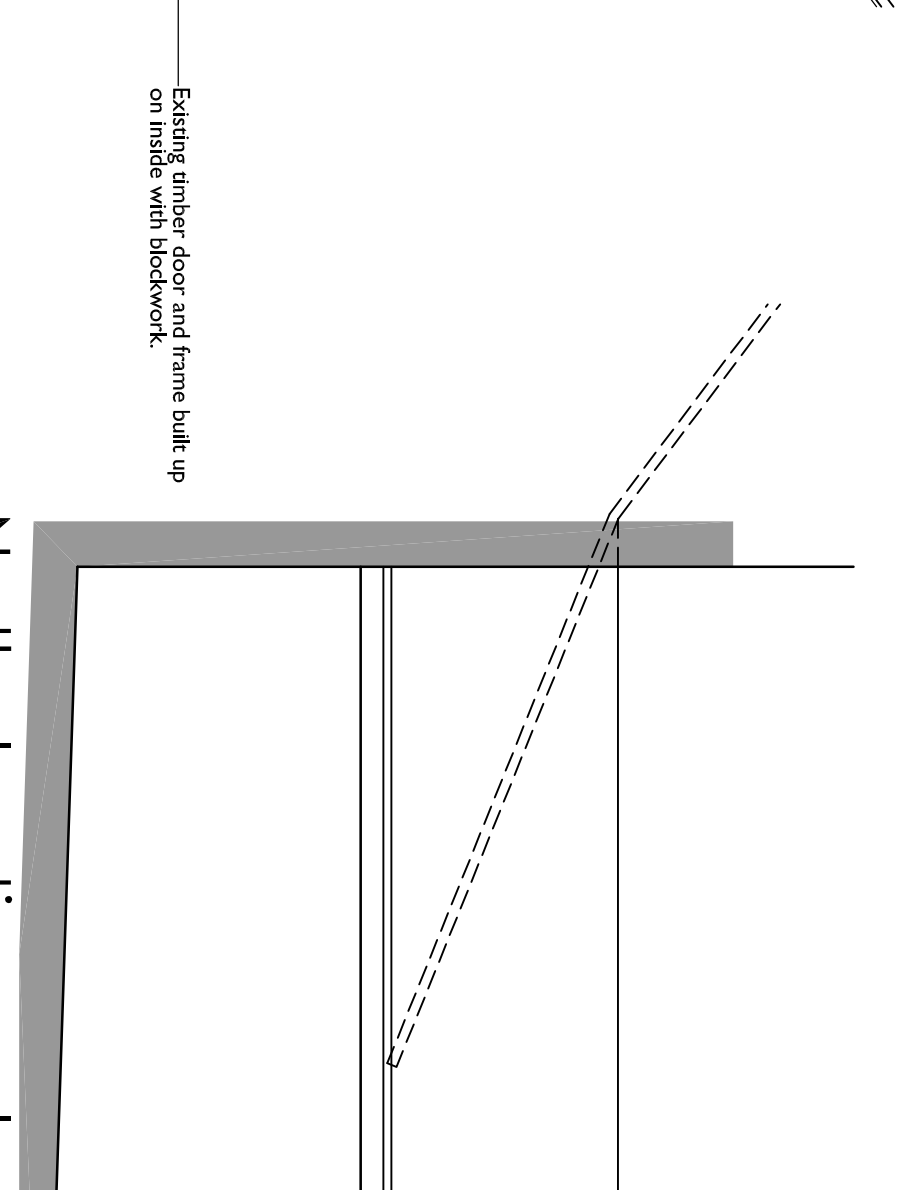

North elevation scale: 1:50 at A1

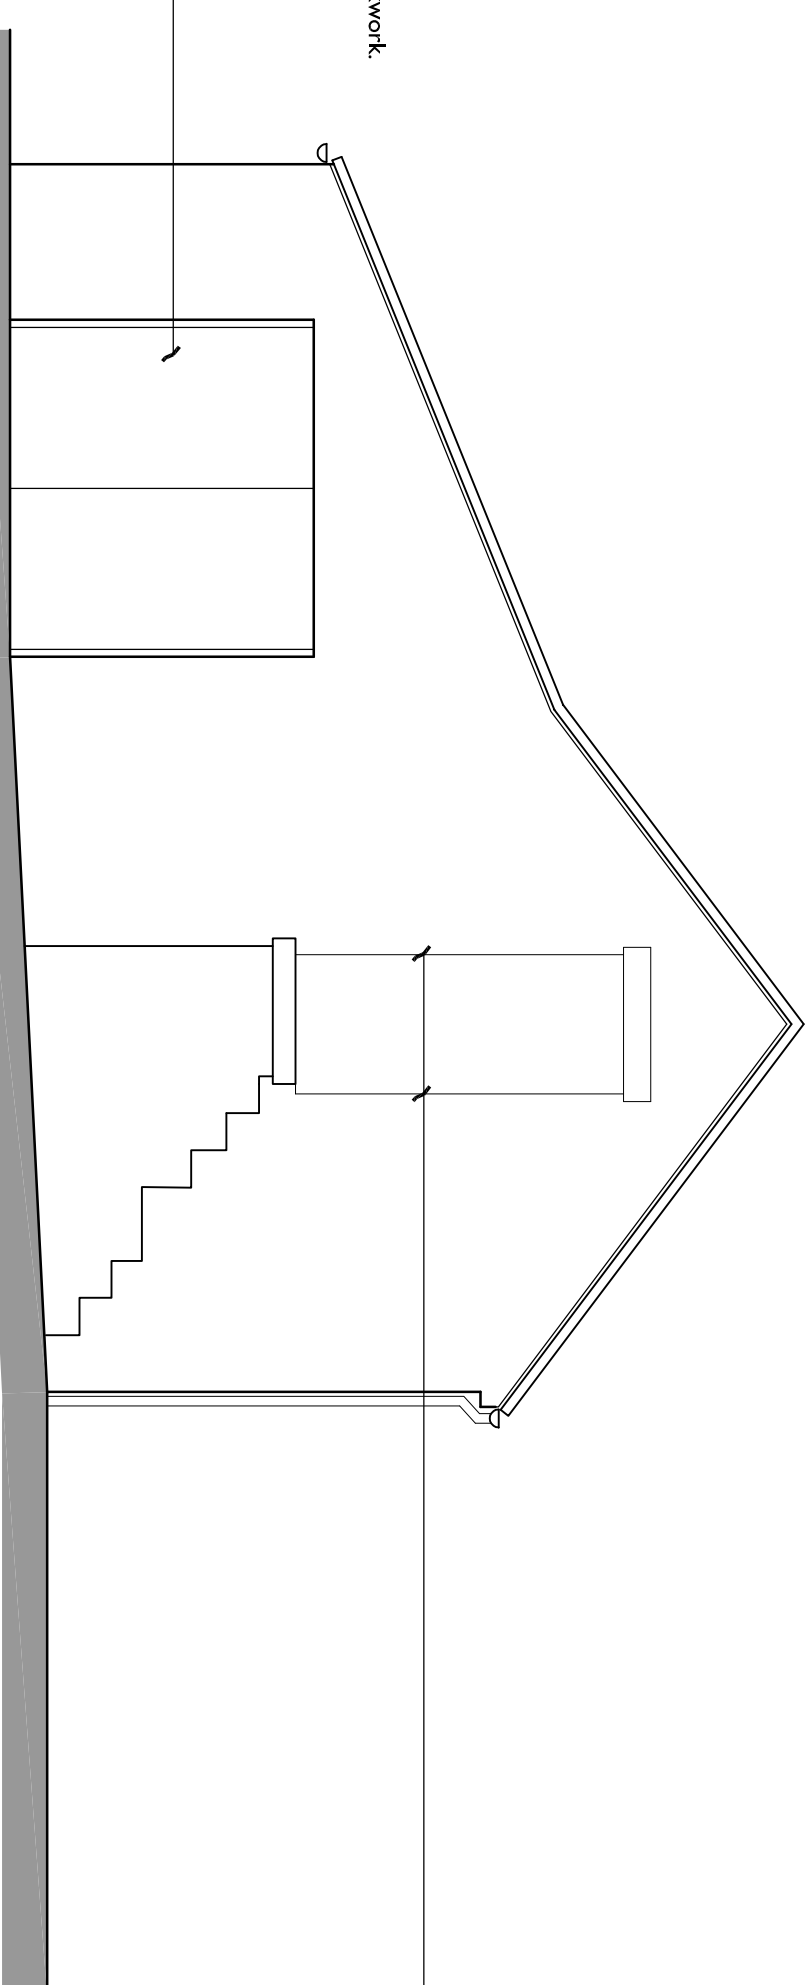

South elevation scale: 1:50 at A1

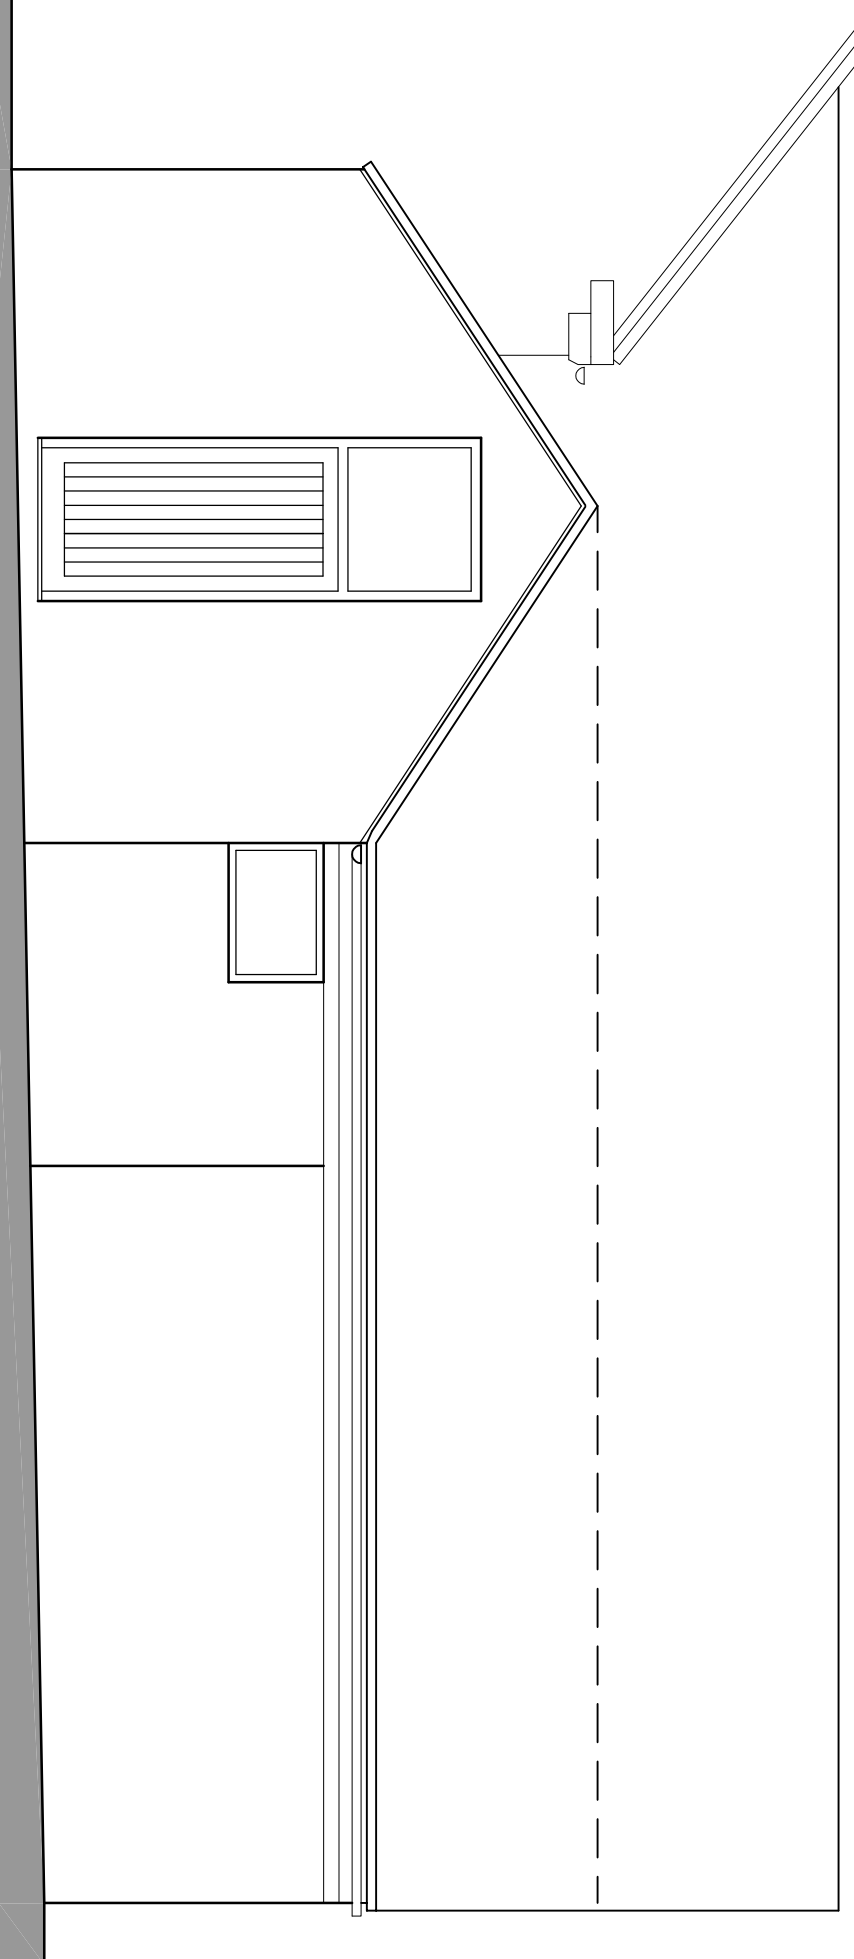

West elevation scale: 1:50 at A1