CONSTRUCTION DRAWINGS - OPEN OUT


## 19 14.5 24.5 ACET950 13.5 Ø7.2 Ø4 45. Ø7.2 9 91 10 တ Ø7.2 45. Ø7.2 33.5 رحي ETD012 ETD015 **ETD017** ETD025N


## **ACET250 Hinge Fitting Details**


Fitting Instructions:

(Full instructions are supplied with each ACET250 Hinge)

- 1. Align outer frame and sash in correct position
- 2. Clamp drill jig ACET950 over the centre line of the hinge
- 3. Drill through all bushes marked '1' with a Ø7.2mm drill bit (supplied) and through all bushes marked '2' with a Ø4mm drill bit (not supplied)
- 4. Fasten the sash plate
- 5. Fasten the frame plate using ACIM062 screws ensuring the grub screws are positioned towards the door sash
- 6. Drive in the central barrel until it lines up with the rings on the frame plate
- 7. Drive in pin 'B' to the top of the hinge and then drive in pin 'A' to the bottom of the hinge
- 8. Open the door and lightly tighten the security screws
- 9. Adjust hinge as required then insert caps and cover caps.

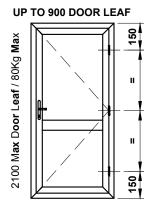

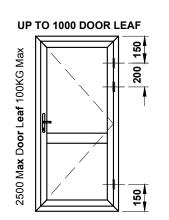

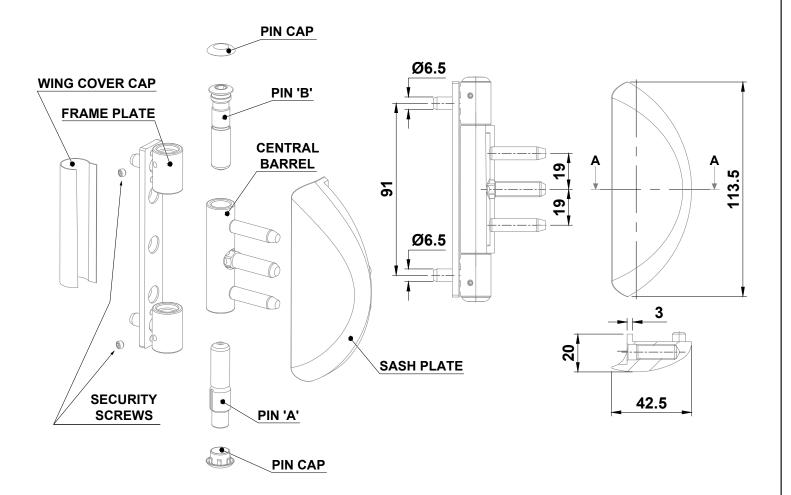

**Do Not Scale From This Drawing**